







## Common Phone Tasks

|                                 |  |
|---------------------------------|--|
| Place a call                    | Dial the number and press  .  |
| Answer a call                   | Press  , <b>Answer</b> , or  .                                 |
| Disconnect                      | Press  or <b>EndCall</b> .  |
| Hold/resume a call              | Press <b>Hold</b> or <b>Resume</b> .   |
| Transfer a call to a new number | Choose <b>Options &gt;Trnsfer</b> , enter a target number, then press <b>Options &gt;Trnsfer</b> again.  |
| Redial a number                 | Press  twice or <b>Options &gt; Redial</b> .  |
| Forward your extension          | Choose <b>Options &gt; CFwdAll</b> . Enter the number to which you want to forward all calls. To cancel, choose <b>Options &gt; CFwdAll</b> .  |
| Use your call logs              | Choose <b>Directory (Book) &gt; Missed Calls, Received Calls, or Placed Calls</b> .<br>To dial, scroll to a listing and press <b>Dial</b> or  . |
| Access your Phone Book          | Press <b>Ph Book</b> or <b>Directory &gt; Phone Book</b> .   |



Cisco, Cisco Systems, the Cisco logo, and the Cisco Systems logo are registered trademarks or trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries. All other trademarks mentioned in this document or Website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0705R)

© 2011 Cisco Systems, Inc. All rights reserved.








### QUICK REFERENCE







 

## Cisco Unified Wireless IP Phone 7925G, 7925G-EX, and 7926G Quick Reference

Using the Phone  
 Shortcut Keys and Buttons  
 Softkey Definitions  
 Entering Text  
 Phone Screen Icons  
 Common Phone Tasks

## Using the Phone

|                                  |   |
|----------------------------------|---|
| Power on/off the phone           | Press  and hold until phone powers on or off.  |
| Access phone features            | Press <b>Options</b> for feature list: <ul style="list-style-type: none"> <li>• Press number key for feature <i>or</i></li> <li>• Scroll to feature and press .</li> </ul>   |
| Access Main menu options         | Press a navigation arrow for: <ul style="list-style-type: none"> <li>• Directory menu (Book)</li> <li>• Line view (Phone)</li> <li>• Settings menu (Tools)</li> <li>• Services menu (World)</li> </ul> Press number key for menu option.  |
| Adjust display brightness        | Choose <b>Settings &gt; Phone Settings &gt; Display Settings</b> , and select <b>Display Brightness</b> . Press  or  , then press <b>Save</b> . |
| Go to main screen from Line View | Press  .   |

## Shortcut Keys and Buttons


|   |   |
|---|---|
| Toggle ringer to vibrate or ring          | Press and hold  .  |
| Adjust ringer, handset, or speaker volume | Press  up or down.   |
| Mute/unmute your phone                    | Press  to toggle.   |
| Activate speaker or handset               | Press and hold  . To use the handset, press and hold button again.           |
| Access voice messages                     | Press and hold  .  |
| Lock/unlock the keypad                    | To lock, press and hold  .<br>To unlock, press <b>Unlock</b> and <b>OK</b> . |

## Softkey Definitions

|                 |  |
|-----------------|--|
| <b>AbbrDial</b> | Dial using a speed dial index number                               |
| <b>Barge</b>    | Add yourself to a call on a shared line                            |
| <b>CallBack</b> | Receive notification when a busy extension becomes available       |
| <b>CFwdAll</b>  | Set up/cancel call forwarding                                      |
| <b>ConfList</b> | View conference participants                                       |
| <b>Confrn</b>   | Create a conference call   |
| <b>DND</b>      | Turn on/off Do Not Disturb (DND)                                   |
| <b>EditDial</b> | Edit a number in a call log  |
| <b>GPickUp</b>  | Answer a call that is ringing in another group or on another line  |
| <b>HLog</b>     | Log in or out of your hunt group                                   |
| <b>iDivert</b>  | Send a call to your voice messaging system                         |
| <b>Join</b>     | Join several calls already on a single line to create a conference |
| <b>MCID</b>     | Report suspicious calls  |
| <b>MeetMe</b>   | Host a Meet-Me conference call                                     |
| <b>Message</b>  | Access your voicemail  |
| <b>Park</b>     | Store a call using Call Park                                       |
| <b>Ph Book</b>  | Open your Phone Book   |
| <b>PickUp</b>   | Answer a call in your group  |
| <b>QRT</b>      | Submit call problems to the system administrator                   |
| <b>Remove</b>   | Remove a conference participant                                    |
| <b>Trnsfer</b>  | Transfer a call  |


## Entering Text


**Character**—Press key one or more times.


**Space**—Press .


**Number**—Press the number key.

**Symbol**—Press these keys:








 



 to enter \* + - / = \ ; ;

 to enter space , . ‘ “ | \_ ~ ’




 to enter # ? ( ) [ ] { }

 to enter ! @ < > \$ % ^ & %


















## Phone Screen Icons

| Line and Call States  |   |
|---|---|
|    | Call on hold  |
|    | Shared line in use  |
|    | Call Forwarding enabled   |
|    | Incoming call, or BLF-monitored line is ringing (BLF Pickup only) |
|    | BLF-monitored line is in-use                                      |
|    | BLF-monitored line is idle  |
|   | BLF-monitored line is in Do Not Disturb state                     |
|  | Speed-dial, call log, or directory listing (BLF status unknown)   |
|  | Intercom line in idle state                                       |
|  | Intercom line in one-way audio                                    |
|  | Intercom line in two-way audio                                    |

## Line Features

|   |               |
|---|---------------|
|  | Phone line    |
|  | Service URL   |
|  | Voice message |

## Other Features

|  |                               |
|--|-------------------------------|
|   | Mute on                       |
|   | Headset active                |
|   | Bluetooth enabled             |
|   | Bluetooth device connected    |
|   | Speaker mode active           |
|   | Ringer off (silent mode)      |
|   | Ring and vibrate on           |
|   | Vibrate only on               |
|   | Application active            |
|   | Radio signal status           |
|   | No radio signal               |
|   | Battery charge status         |
|   | Keypad locked                 |
|   | Business number for a contact |
|   | Home number for a contact     |
|   | Mobile number for a contact   |
|  | Other number for a contact    |